


# Technical Manual

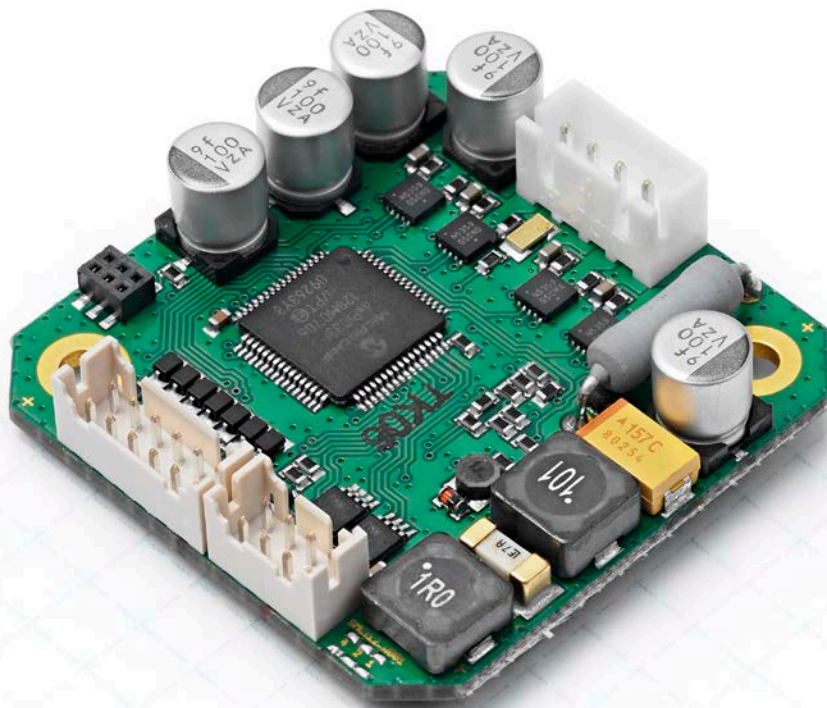

## Stepper controller SMCI12

NANOTEC ELECTRONIC GmbH & Co. KG  
Kapellenstraße 6  
D-85622 Feldkirchen b. Munich, Germany

Tel. +49 (0)89-900 686-0  
Fax +49 (0)89-900 686-50  
[info@nanotec.com](mailto:info@nanotec.com)

## Editorial

© 2013

**Nanotec<sup>®</sup> Electronic GmbH & Co. KG**  
Kapellenstraße 6  
D-85622 Feldkirchen b. Munich, Germany

Tel.: +49 (0)89-900 686-0  
Fax: +49 (0)89-900 686-50

Internet: [www.nanotec.com](http://www.nanotec.com)

All rights reserved!

MS-Windows 2000/XP/Vista are registered trademarks of Microsoft Corporation.

### Translation of original handbook

### Version/Change overview

Version	Date	Changes
1.0	03.11.2010	New issue
1.1	03.11.2011	Revision
1.2	25.06.2013	Revision

## About this manual

### Target group

This technical manual is aimed at designers and developers who need to operate a Nanotec<sup>®</sup> stepper motor without much experience in stepper motor technology.

### Important information

This technical manual must be carefully read before installation and commissioning of the stepper motor controller.





Nanotec<sup>®</sup> reserves the right to make technical alterations and further develop hardware and software in the interests of its customers to improve the function of this product without prior notice.

This manual was created with due care. It is exclusively intended as a technical description of the product and as commissioning instructions. The warranty is exclusively for repair or replacement of defective equipment, according to our general terms and conditions; liability for subsequent damage or errors is excluded. Applicable standards and regulations must be complied with during installation of the device.

For criticisms, proposals and suggestions for improvement, please contact the above address or send an email to: [info@nanotec.de](mailto:info@nanotec.de)

### Additional manuals

Please also note the following manuals from Nanotec:

<b>NanoPro User Manual</b>	Configuration of controllers with the NanoPro software	
<b>NanoCAN User Manual</b>	Configuration of the CAN communication for CANopen-capable controllers with the NanoCAN software	
<b>Nanotec CANopen reference</b>	Comprehensive documentation of the CANopen functions	
<b>Programming manual</b>	Controller programming <ul style="list-style-type: none"> <li>• Command reference</li> <li>• NanoJ</li> <li>• COM interface</li> </ul>	

The manuals are available for download at [www.nanotec.com](http://www.nanotec.com).



## Contents

Editorial.....	2
About this manual.....	3
Contents .....	5
<b>1 Overview .....</b>	<b>7</b>
<b>2 Connection and commissioning .....</b>	<b>9</b>
2.1 Overview .....	9
2.2 Connection diagram .....	10
2.3 Commissioning.....	10
<b>3 Connections and circuits .....</b>	<b>14</b>
3.1 Inputs and outputs: Connector X11 .....	14
3.2 Stepper motor connection: Connector X10.....	16
3.3 Power supply and RS485/CANopen interface: Connector X12.....	17
3.3.1 Pin assignment.....	17
3.3.2 Power supply connection .....	17
3.3.3 RS485 network/CANopen interface .....	18
<b>4 Operating modes.....</b>	<b>21</b>
4.1 Serial operating modes .....	21
4.2 CANopen operating modes.....	22
<b>5 Troubleshooting.....</b>	<b>24</b>
<b>6 Technical data .....</b>	<b>26</b>
Index.....	28



# 1 Overview

## Introduction

The stepper motor controller SMCI12 is an extremely compact and cost-effective constant current power output stage with integrated closed loop current control.

Due to the great capacity and functions available, it offers designers and developers a rapid and simple method of resolving numerous drive requirements with less programming effort.

It is used for controlling standard stepper motors. BLDC motors are not supported.

## Variants

The stepper motor controller is available in the following variants:

- SMCI12: For control via RS485
- SMCI12-3: For control via CANopen

Unless otherwise specified, the term "SMCI12" is used for both variants in this manual.

## SMCI12 functions

The stepper motor controller SMCI12 contains the following functions:

- Microstep -1/1 – 1/64 final output stage (step resolution of up to 0.014° in motor with a step angle of 0.9° in 1/64 step mode)
- Powerful DSP microprocessor for flexible I/O
- RS485/CANopen port for parameterization and control
- Application program with NanoJ (SMCI12 with RS485)
- Network capability with up to 254 motors (SMCI12) or 127 motors (SMCI12-3)
- Easy programming with Windows software NanoPro (SMCI12) or NanoCAN (SMCI12-3)

### *dspDrive*<sup>®</sup>

With dspDrive<sup>®</sup>, the motor current is controlled directly by a digital signal processor. Unlike conventional ICs, which resolve the winding current measurement and the target current value with only 6 or 8 bit, the new dspDrive<sup>®</sup> performs the entire control with a resolution of 12 bit. The parameters of the PI current controller can be adjusted to the motor and by the user as a function of the rpm.

This has the following application advantages:

- Very smooth, low-resonance operation with a sinusoidal current in the windings, even at low speeds.
- Very good step angle precision and synchronicity, even in open loop operation.

### *NanoJ*

The integrated programming language NanoJ, based on the Java standard, means complete application programs can be realized on the drivers that can be executed independently without a higher-order controller.

The programs can be created, compiled directly and written to the controller with the free NanoJEasy editor.

NanoJ is only supported by the RS485 firmware.

More detailed information can be found in the separate programming manual.

## Settings

The operating behavior of the motor can be set and optimized according to individual requirements by setting the motor-related parameters. The parameters can be set using the NanoPro software and significantly reduce commissioning time.

More detailed information on this can be found in the separate NanoPro user manual.



## 2 Connection and commissioning

### 2.1 Overview

#### Plug connections

The controller has the following connectors:


X10 (JST-XH): Stepper motor connection

X11 (JST-PHD): Inputs and outputs

X12 (JST-PHD): Power supply and interface RS485 or CANopen


#### Configuration

The following figure shows the configuration of the connectors on the printed circuit board.

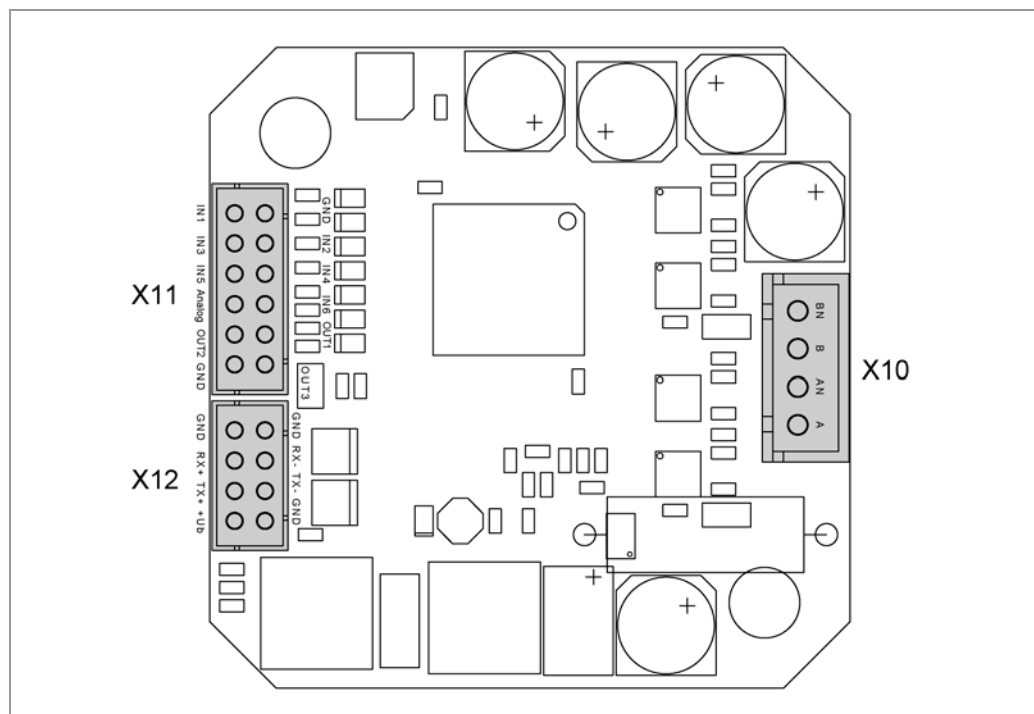

## 2.2 Connection diagram

To operate a stepper motor with the SMC112 stepper motor controller, the wiring must be implemented according to the following connection diagram.

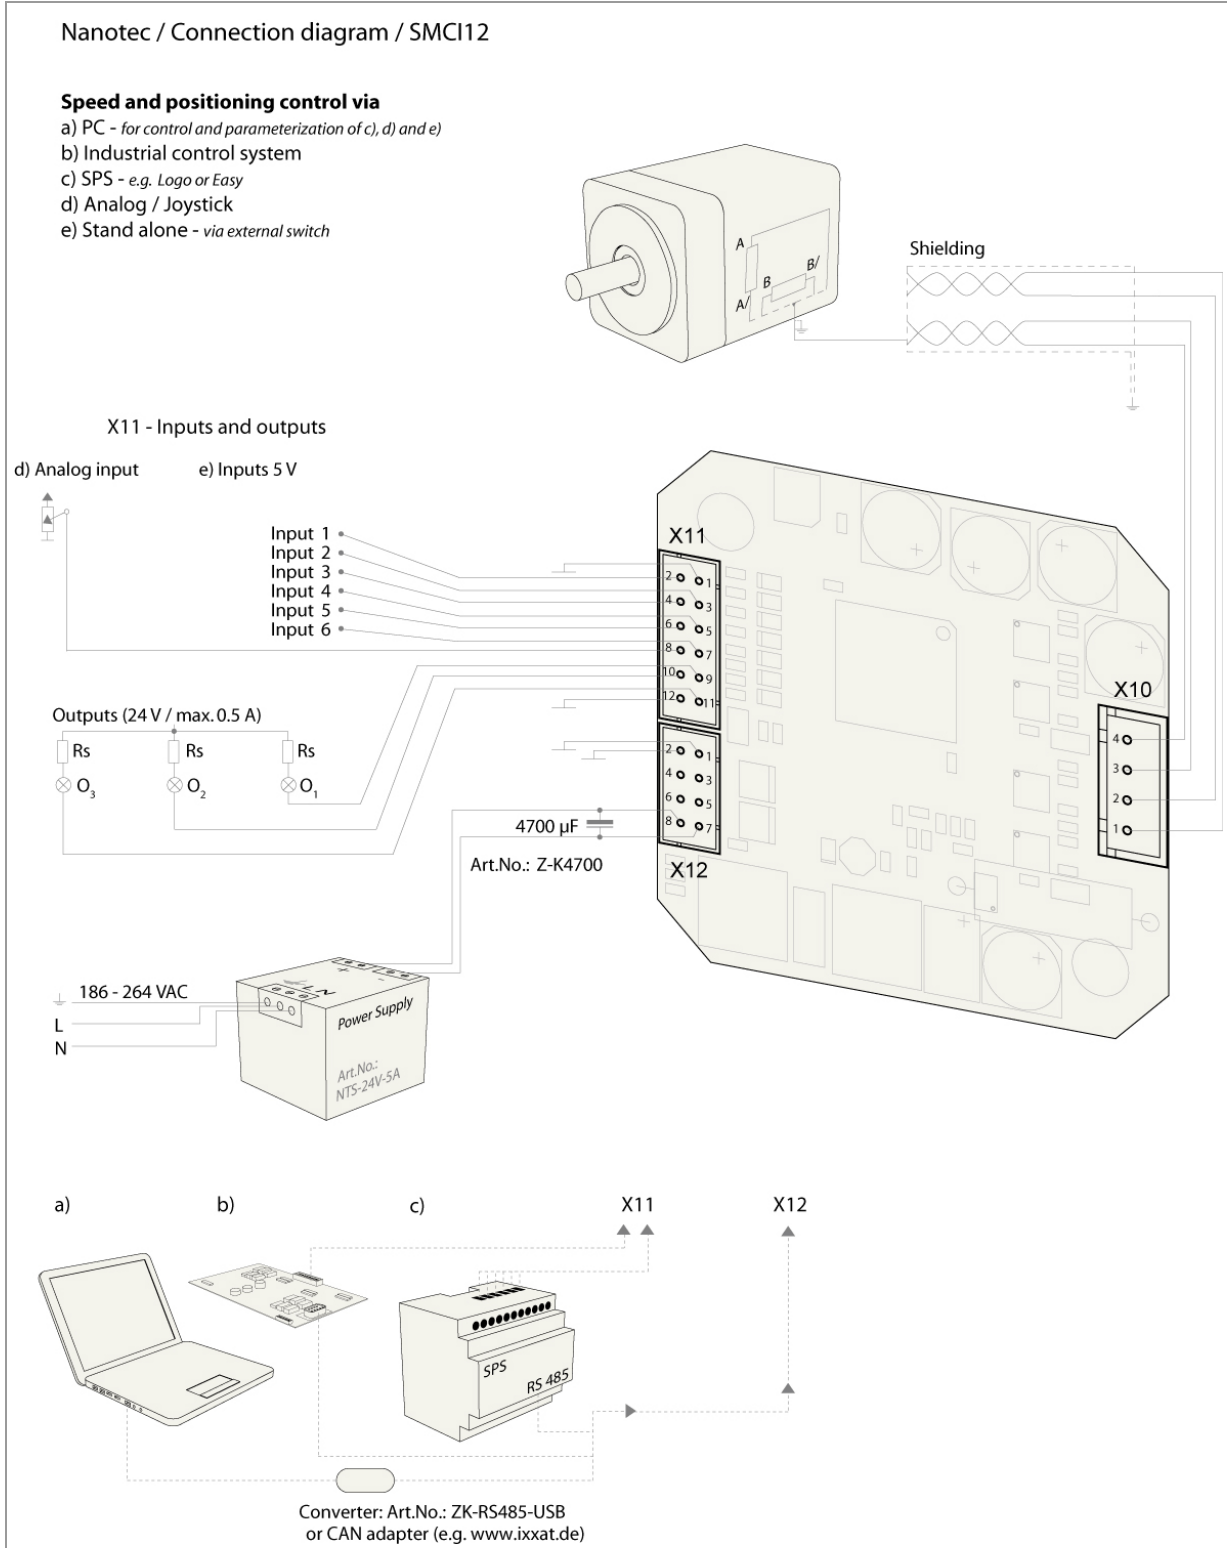

## 2.3 Commissioning

### Introduction

The connection and commissioning of the SMC112 stepper motor are described below.

This section describes the main first steps you need to take to be able to quickly begin working with the SMC112 if you are using the NanoPro (SMC112) or NanoCAN (SMC112-3) software from a PC. You will find more detailed information in the separate NanoPro and NanoCAN manuals.



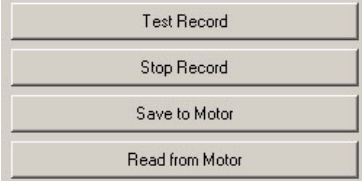
If you want to work with a PLC or your own program later, you will find the necessary information in the separate programming manual.

Familiarize yourself with the SMC112 stepper motor controller and the corresponding NanoPro or NanoCAN control software before you configure the controller for your application.

### Commissioning with NanoPro (SMC112 with RS485 firmware)

Proceed as follows to commission the controller with the RS485 firmware:

Step	Action	Note
1	Install the NanoPro control software on your PC. See the NanoPro separate manual.	Download of <a href="http://www.nanotec.com">www.nanotec.com</a>
2	Connect the controller to the stepper motor according to the connection diagram.	Connection diagram, see Section 2.2. Detailed information on connections can be found in Chapter 3.
3	Switch on the operating voltage (12-24 V DC).	
4	If necessary, install the driver for the converter cable ZK-RS485-USB.	Download <a href="http://www.nanotec.com">www.nanotec.com</a> in the Accessories/Converter menu item
5	Connect the controller to the USB port of your PC. Use the converter cable ZK-RS485 and the cable set ZK-SMC112.	Order identifier: <ul style="list-style-type: none"> <li>• ZK-RS485-USB</li> <li>• ZK-SMC112</li> </ul>
6	Start the NanoPro software.	The NanoPro main menu appears.
7	Select the <Communication> tab.	

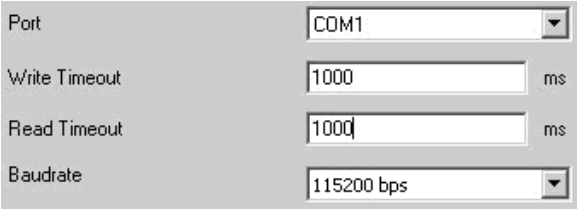Step	Action	Note
8	<p>In the "Port" field, select the COM port to which the SMC12 is connected.</p> 	The number of the COM port to which the controller is connected can be found in the device manager of your Windows PC (System Control/System/Hardware).
9	Select the "115200 bps" entry in the "Baudrate" selection field.	
10	<p>Check the current setting using the motor data sheet.</p> <p><b>Presettings:</b></p> <ul style="list-style-type: none"> <li>Phase current: 50% (current level)</li> <li>Phase current during idle: 25% (idle current)</li> </ul>	Under no circumstances may the current be set to a value higher than the rated current of the motor.
11	<p>Select the &lt;Movement Mode&gt; tab.</p> 	
12	<p>Click on the &lt;Test Record&gt; button to carry out the pre-set travel profile.</p> 	The connected motor operates with the pre-set travel profile (default travel profile after new installation).
13	<p>You can now enter your required settings. For instance, you can enter a new travel profile.</p>	See the NanoPro separate manual.

### Commissioning with NanoCAN (SMC112-3 with CANopen firmware)

Proceed as follows to commission the controller with the CANopen firmware. More detailed information can be found in the separate NanoCAN manual.

Step	Action	Note
1	Install the NanoCAN control software on your PC.	Download from <a href="http://www.nanotec.com">www.nanotec.com</a>
2	Connect the controller to the stepper motor according to the connection diagram.	Connection diagram, see Section 2.2. Detailed information on connections can be found in Chapter 3.
3	Switch on the operating voltage (12-24 V DC).	
4	Install and configure your CANopen adapter.	Details can be obtained from the manufacturer of the CANopen adapter.
5	Start the NanoCAN software.	
6	Select the desired node ID, the baud rate and, if necessary, the CAN card in the <Configuration & NMT> tab.	
7	Check the current setting using the motor data sheet. <b>Presettings:</b> <ul style="list-style-type: none"> <li>• Phase current: 50% (current level)</li> <li>• Phase current during idle: 25% (idle current)</li> </ul>	Under no circumstances may the current be set to a value higher than the rated current of the motor.
8	Select the desired operating mode (e.g. PP mode) in the <Drive Modes> tab.	
9	Click on the <Power on> button.	
10	Enter the desired target position in the <target> field.	
11	Click on the <Start> button.	


## 3 Connections and circuits

### 3.1 Inputs and outputs: Connector X11

#### Introduction

An overview of the assignments can be found in the connection diagram in Section 2.1. This section looks in detail at the assignment, functions and circuits of the connector X11.

#### Pin assignment

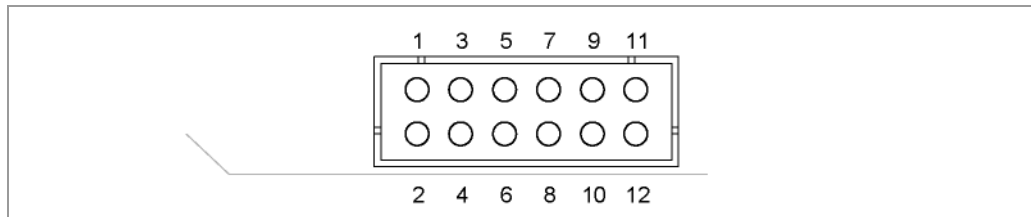

Pin no.	Name	Observations
1	GND	Mass (0 V)
2	Input 1	Digital inputs (max. 5 V)
3	Input 2	
4	Input 3	
5	Input 4	
6	Input 5	
7	Input 6	
8	Analog In	Analog input (−10 V ... +10 V)
9	Output 1	Digital outputs
10	Output 2	
11	Output 3	
12	GND	Mass (0 V)

#### Function of the inputs

All digital inputs – with the exception of the "Clock" input in the clock directional mode – can be freely programmed using the NanoPro software (e.g. as a limit position switch, enable, etc.) and can be used for sequential control with NanoJ.

All inputs can be configured for "active-high" (PNP) or "active-low" (NPN) with NanoPro.

### Signal states at the outputs (SMC112 with RS485 firmware)

**Note:**

In the SMC112-3 with CANopen firmware, the status of the controller is not displayed at the outputs.

The following table shows the possible signal states at the outputs 1 to 3:

Signal states			Meaning
Output 3	Output 2	Output 1	
	0	0	Rotation monitoring (error) or limit switch
	0	1	Motor idle (waiting for new command)
	1	0	Busy (control processing last command)
	1	1	Reference point or zero point reached
1			Overtemperature

The outputs can be freely programmed using the NanoPro software.


**Note:**

Output 3 is also used to display errors and when switching on the controller.

### Input circuits


**Note:**

The voltage must not exceed 5 V. It should drop below 2 V for safe switching off and be at least 4.5 V for safe switching on.

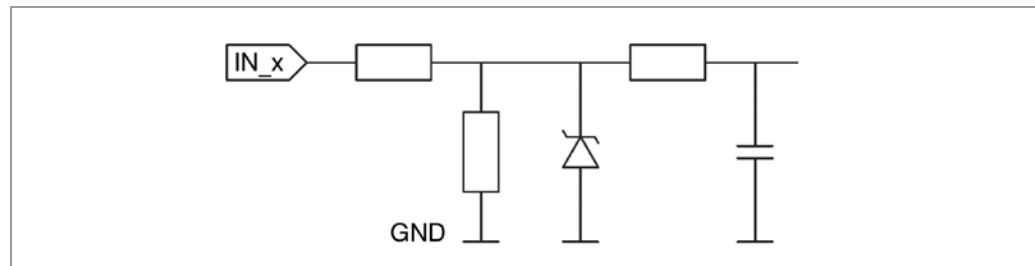

### Output circuits

The outputs are transistor outputs in Open-Collector circuits (0 switching, max. 24 V/0.5 A). An LED can be integrated to test the output. The LED lights up when the output is active.

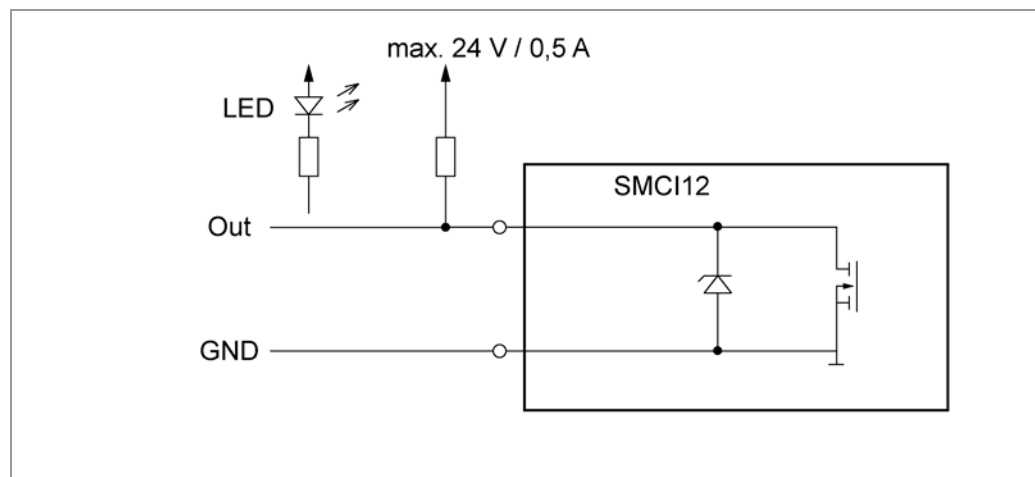

## 3.2 Stepper motor connection: Connector X10

### General information

The motor is connected to the SMC112 with a 4-wire cable. Twisted wire pair cables with braided shields are recommended.




#### **Danger of electrical surges**

Mixing up the connections can destroy the output stage! See the data sheet of the connected stepper motor.

Never disconnect the motor when operating voltage is applied!

**Never** disconnect lines when live!

### Pin assignment

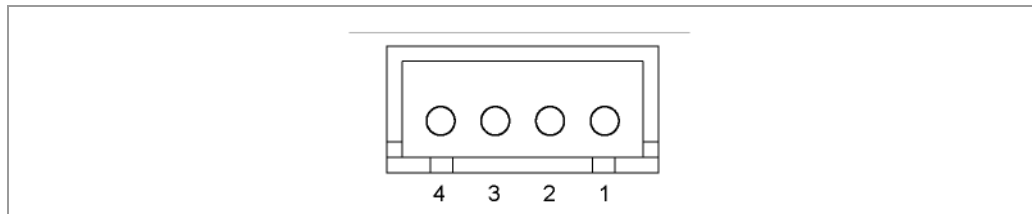

Pin no.	Name	Observations
1	A	See the data sheet of the connected stepper motor.
2	A/	
3	B	
4	B/	

### Motor with 6 or 8 connections

If you are using a motor with 6 or 8 connections, you need to connect the windings.

The pin configuration for the motor can be found on the motor data sheet, which can be downloaded from [www.nanotec.com](http://www.nanotec.com).


For a simplified connection, you can also use connection cable **ZK-XHP4-300**.

Details can be found on the Nanotec website [www.nanotec.com](http://www.nanotec.com).



### 3.3 Power supply and RS485/CANopen interface: Connector X12

#### 3.3.1 Pin assignment

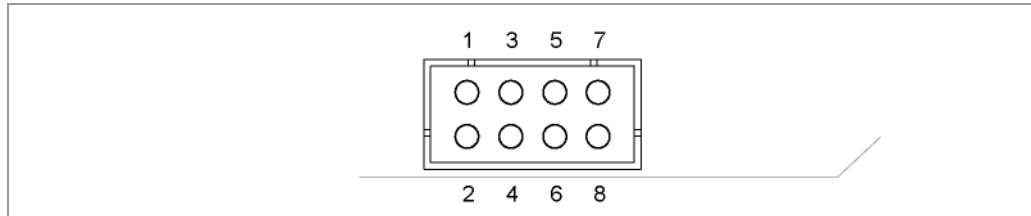

Pin no.	RS485	CANopen	Observations
1	GND	GND	Earth (0 V)
2	GND	GND	
3	Rx-	n.c.	Network interface
4	Rx+	n.c.	
5	Tx-	CAN low (CAN -)	
6	Tx+	CAN high (CAN +)	
7	GND	GND	Earth (0 V)
8	Vcc	Vcc	Operating voltage 12-24 V DC

#### 3.3.2 Power supply connection

##### Permissible operating voltage

The permissible operating voltage of the stepper motor controller SMCI12 lies within the range 12-24 V DC and must not exceed 26 V or undershoot 11 V.

A charging condenser with minimum 4700  $\mu$ F (10000  $\mu$ F) must be provided for the operating voltage to prevent exceeding the permissible operating voltage (e.g. during braking).



##### **Danger of electrical surges**

Connect charging condenser with minimum 4700  $\mu$ F!

Connect a condenser with 10000  $\mu$ F for motors with flange size 86x86 (series ST8918) or greater!


An operating voltage > 26 V can destroy the output stage! The ballast resistance overheats after approx. 500 ms depending on the voltage.

Mixing up the connections can destroy the output stage!

Never disconnect the motor when operating voltage is applied!

**Never** disconnect lines when live!

### Connection diagram

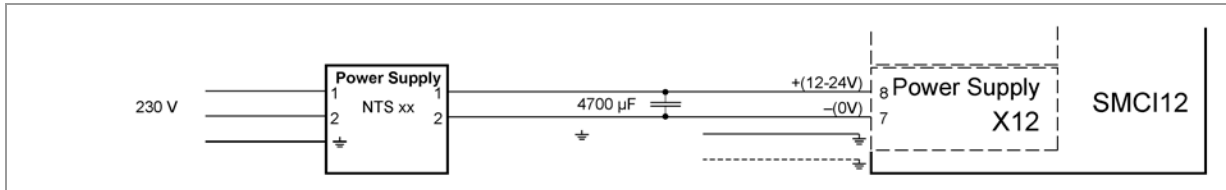

**Note:**  
Complete connection diagram, see Section 2.1.

### Accessories for voltage supply

Appropriate power packs and charging condensers are available as accessories:

Name	Order identifier
Power pack	NTS-xxV-yA (xx=voltage: 12 or 24 V, y=current: 2.5, 5 or 10 A) Information on the selection of the required power supply unit can be found in our FAQ on <a href="http://www.nanotec.com">www.nanotec.com</a> .
Charging condenser	Z-K4700 or Z-K10000

**Note:**  
Further information about accessories can be found on the Nanotec website:  
[www.nanotec.com](http://www.nanotec.com).

### 3.3.3 RS485 network/CANopen interface

#### SMC112 in a network

Up to 254 (SMC112) or 127 (SMC112-3) stepper motor controllers can be controlled in a network from a PC or PLC.

These network connections are set up via the RS485/CANopen interface.

#### Two-wire operation RS485

To enable RS485 two-wire transmission capability, all bus stations must have a direction control.

An intelligent converter, which automatically switches to transmission mode when a start bit is received at the RS-232 interface and returns to reception mode at the end of the stop bit, enables two-wire operation of the SMC112. This solution requires no software support.

We can recommend the ICP-7520 converter, for example, that is available from Schuricht.

Talk to our Technical Hotline if you require support for this.



**Circuit diagram RS485 network**

**CONNECTION DIAGRAM RS485 NETWORK CONTROLLER**

- 2...254 units
- If there are more than two units Pin8 (GND) has to be connected to each unit.
  - GND and the shielding must be connected in each end.
  - In disregard of the above points the controller could be destroyed
  - If there are more than two units Pin8 (GND) has to be connected to each unit.
  - The last unit in each end of the line must be terminated with 120Ω.
  - the cable must be shielded twisted pair 6x0.2mm<sup>2</sup> (AWG24)
  - the max. cable length of the network cable is 5m.

Disregard of the above points the controller could be not functional, because irregularity can be applied into the inputs and the communication lines and thus may arise the considered errors in the processes .

- before connecting the unit to the network, every unit must get his own module number via Nanopro programm.

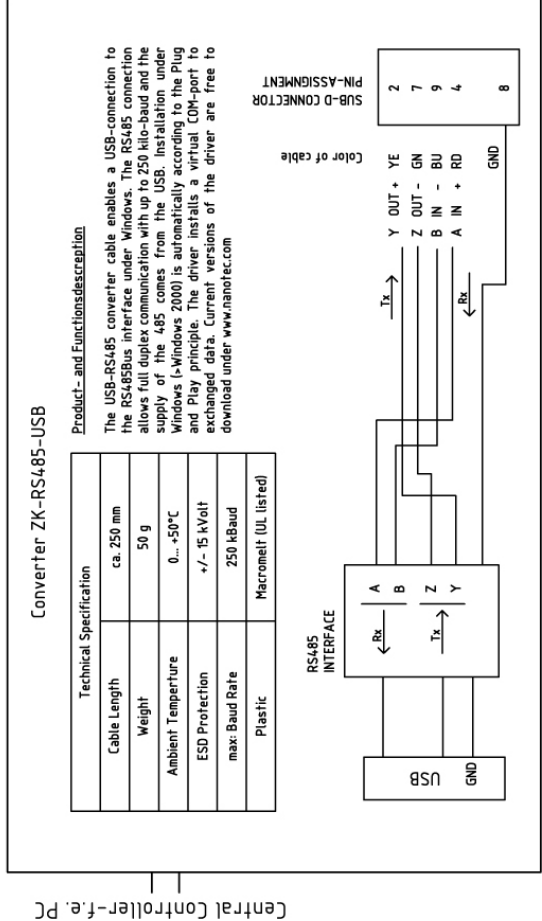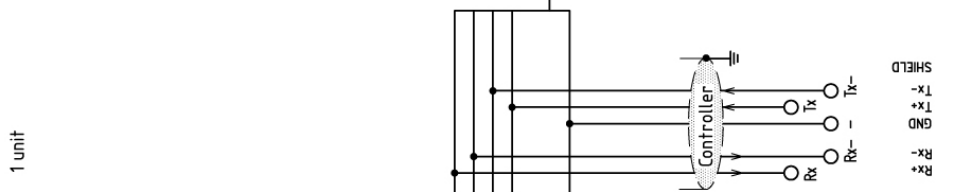

**Caution:**

**first read the connecting-description**

## CANopen connection

A suitable CAN interface adapter (e.g. USB adapter from IXXAT or PEAK) is required for connecting with a PC.

### CANopen standard connector assignment (on the adapter)

Pin no.	Name
2	CAN low
3	CAN GND
7	CAN high

### CANopen connection assignments on the controller

Circuits according to Section 3.3.1 "Pin assignment"

### Notes on the baud rate


It is important to note that both the controller and the CAN master use the same baud rate. Only this way can communication be established.

The baud rate has a direct influence on the maximum possible bus length. The following setting shows the possible baud rates and the associated maximum permissible bus lengths.

Baudrate	Bus length
1 MBaud	40 m
500 kBaud	130 m
250 kBaud	270 m
125 kBaud	530 m
50 kBaud	1300 m
20 kBaud	3300 m

### Notes on the bus termination

With CAN, the bus termination is handled by two 120 Ohm resistors on both ends of the bus.

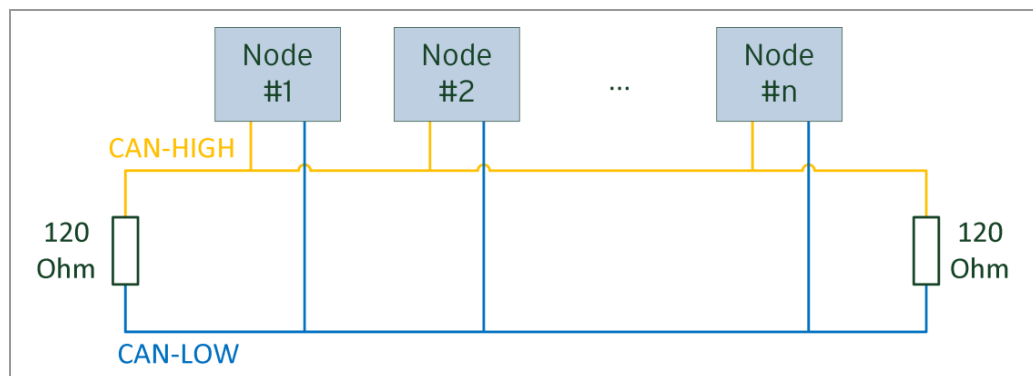

## 4 Operating modes

### 4.1 Serial operating modes

#### Introduction

Depending on the travel profile, the motor can be operated in serial mode using different operating modes. Due to the great capacity and functions available, it offers designers and developers a rapid and simple method of resolving numerous drive requirements with less programming effort.

Select the required operating mode for each drive profile and configure the controller according to your requirements.


More detailed information can be found in the separate NanoPro manual.

#### Overview of operating modes and their areas of application

Operation mode	Application
Relative positioning	Use this mode when you wish to travel to a specific position. The motor travels according to a specified drive profile from a Position A to a Position B.
Absolute positioning	
External reference run	During an external reference run, the motor travels to a switch connected to the reference input.
Speed mode	Use this mode when you wish to travel with a specific speed (e.g. a conveyor belt or pump speed). In the speed mode, the motor accelerates with a specified ramp from the starting speed (start frequency "V Start") to the specified maximum speed (maximum frequency "V Normal"). Several inputs enable the speed to be changed on-the-fly to different speeds.
Flag positioning mode	The flag positioning mode offers a combination of the speed and positioning modes. The motor is initially operated in speed mode; when a trigger point is reached, it changes to the positioning mode and the specified setpoint position (relative to the trigger position) is approached. This operating mode is used for labeling, for example: the motor first travels with the set ramp to the synchronous speed of the conveyed goods. When the labels are detected, the preset distance (position) is traveled to apply the labels.

Operation mode	Application
Clock direction mode, left/right	Use this mode when you wish to operate the motor with a superordinate controller (e.g. CNC controller).
Clock direction mode Ext. Ref.	In the clock direction mode, the motor is operated via two inputs with a clock and a direction signal from a superordinate positioning control (indexer). External reference run is supported.
Analog and joystick mode	The speed setting of the motor is controlled in this operating mode simply with a potentiometer or a joystick (-10 V to +10 V). Use this mode if you want to use the motor in a simple application: <ul style="list-style-type: none"> <li>• Setting a specific speed, e.g. via an external potentiometer,</li> <li>• Traveling synchronously with a superordinate controller with analog output (-10 V to +10 V).</li> </ul>
Analogue positioning mode	Use this mode when you wish to travel to a specific position. The voltage level on the analog input is proportional to the required position.

**Selecting the operating mode in NanoPro**

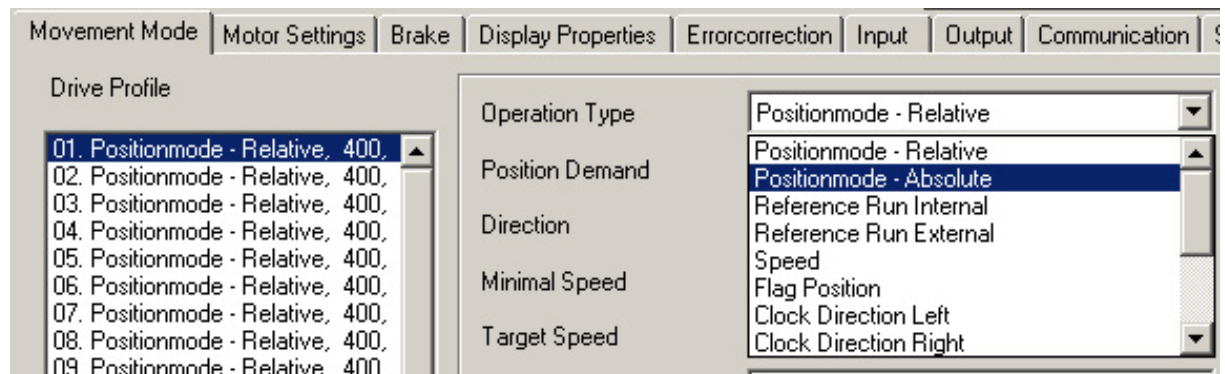

## 4.2 CANopen operating modes

### Introduction

The motor can be operated using a total of 5 different operating modes in CANopen mode.

 
More detailed information can be found in the separate NanoCAN manual.

### Overview of operating modes and their areas of application

Operation mode	Application
Positioning Mode (PP Mode)	Use this mode if you want to use the motor for positioning. The motor moves from A to B with the set parameters (ramp, speed, etc.).
Speed Mode (Velocity Mode)	Use this mode when you wish to travel with a specific speed (e.g. a conveyor belt).
Reference run (Ref. Mode/Homing Mode)	Use this mode to reference the motor (external/on block).
Interpolated Position Mode	Use this mode with a superordinate path control.
Torque Mode	Use this mode to specify a defined torque.

### Selecting the operating mode in NanoCAN


In the <Drive Modes> tab the operating mode can be selected. When the tab is activated, the corresponding SDO is immediately written to the controller to activate the (possibly previously) selected operating mode.

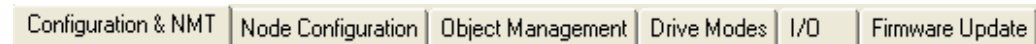

## 5 Troubleshooting

### Troubleshooting procedure

Proceed with care during troubleshooting and error rectification to avoid damaging the controller.

	<p><b>Danger of electrical surges</b></p> <p>An operating voltage &gt; 26 V and incorrect connections can destroy the end stage. Never disconnect the motor when operating voltage is applied! Never disconnect lines when live!</p>
---	--

### Possible errors in serial mode

Error	Possible cause	Rectification
Controller is not ready	Data transmission to SMC112-S not possible (communication error): Incorrect COM port selected.	In the "Communication" tab, select the PC port to which you have connected the SMC112 (e.g. "COM-1"). The port used can be found in the device manager of your PC.
	Wrong baud rate setting.	Select the baud rate 115200 bps in the <Communication> tab.
	Communication cable not connected or interrupted (incorrect RS232-RS485 converter used).	Use the recommended RS485-USB converter from Nanotec: <ul style="list-style-type: none"> <li>Order identifier: ZK-RS485-USB</li> </ul>
	A non-existent motor number (module number) is set.	Set the correct module address. See the separate manual on NanoPro.
	The power supply of the SMC112 is interrupted.	Check voltage supply, switch on if necessary.
	Another open program is blocking the COM port to which the SMC112 is connected.	Close down other programs on your PC.
	Inadmissible data was sent to the controller during the output of a travel profile.	Click on the <Yes> button to stop the travel profile. The SMC112 switches back to the "Ready" state. The data can then be resent to the controller.
Transmission error	Data transmission to the SMC112 is disturbed (sender or receiver are disturbed).	Check that the motor connection is correctly wired. We recommend using the following Nanotec converters: <ul style="list-style-type: none"> <li>ZK-RS485-USB</li> </ul>
Position error	The motor cannot reach the position or the limit switch was overrun.	Click the <Yes> button in the error message; the error is reset.



**Possible errors in CANopen mode**

<b>Error</b>	<b>Possible cause</b>	<b>Rectification</b>
No communication with the controller	The wrong node ID has been set.	On the <Configuration & NMT> tab in NanoCAN, select the node ID that is set on the rotary switches of the controller.
	Wrong baud rate setting.	On the <Configuration & NMT> tab in NanoCAN, select the baud rate 115200 bps.
	The communication cable is not connected or is interrupted.	Check all connections, especially the terminal resistances.
	CAN bus incorrectly terminated with 120 Ohm.	Ideally, terminate the bus on both ends with 120 Ohm.
Transmission error	Data transmission is disturbed (sporadically).	Switch the power supply off and on again.

## 6 Technical data

### Electrical connections

Operating voltage $V_b$	DC 12-24 V $\pm$ 4%
Max. phase current	Adjustable up to max. 2.7 A/phase Continuous current 1.8 A/phase
Current drop	Adjustable 0 to 150% of rated current
Interface	<ul style="list-style-type: none"> <li>RS-485 (4-wire), 115200 bps (adjustable) 1 start bit, 8 data bit, 1 stop bit no parity</li> <li>CANopen</li> </ul>

### Controller parameters

Step resolution	Full Step Half Step Quarter Step Fifth Step Eighth Step One tenth Step, One 16th Step 32nd Step 64th Step Feed rate Adaptive microstep (1/128)
Step frequency	16 kHz with a full step, corresponding multiples with a microstep (e.g. 1 MHz with 1/64) Max. input frequency, clock direction mode (serial mode): 200 kHz


### Protective circuits

Overvoltage and undervoltage	Protection circuit for voltage > 26 V or < 11 V
Max. heat sink temperature	Approx. 80 °C
Max. ambient temperature	0 to 40 °C

### Inputs and outputs

Inputs	<ul style="list-style-type: none"> <li>6 digital inputs (TTL, max. 5 V)</li> <li>1 analog input (+10 V / • 10 V)</li> </ul>
Outputs	3 MosFET outputs Open collector (0 switching, max. 24 V/0.5 A)

**SMC112 dimensions**

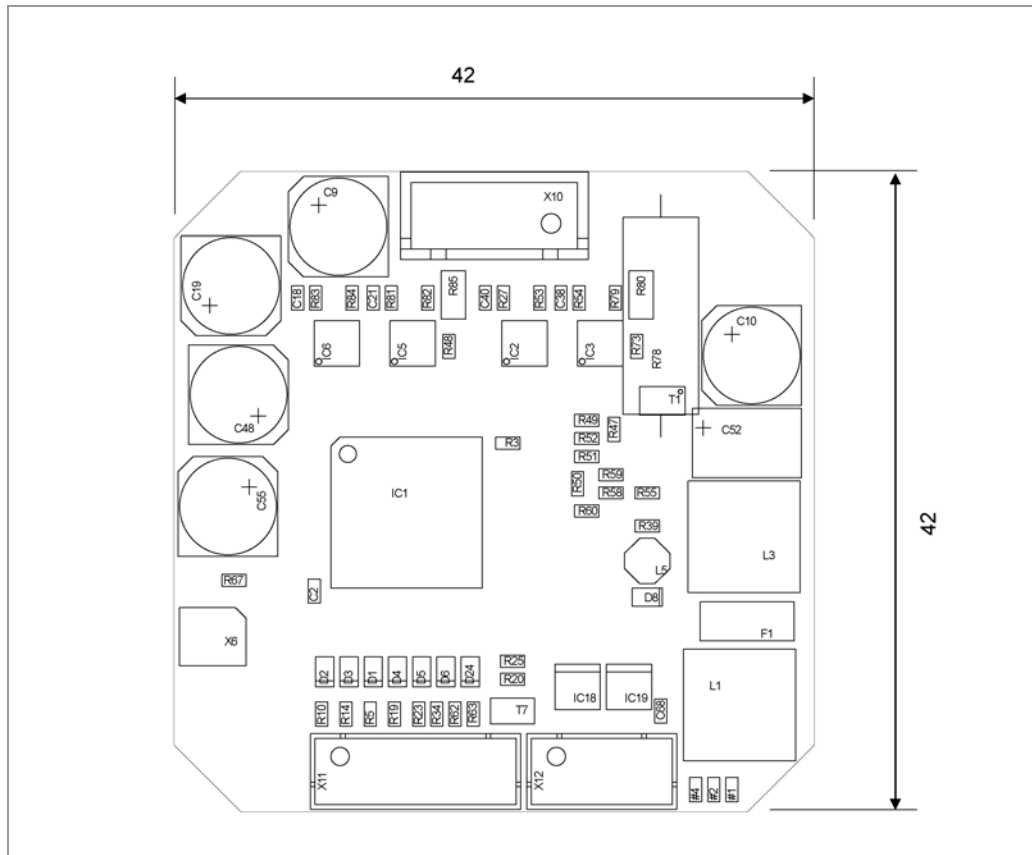

A complete set of datasheets is available for downloading at [www.nanotec.com](http://www.nanotec.com).

## Index

### A

Accessories for voltage supply ..... 18

### C

CANopen ..... 13, 17, 18

Commissioning ..... 11

connector X10 ..... 16

Connector X11 ..... 14

connector X12 ..... 17

### D

dspDrive ..... 7

### F

Firmware ..... 7

Functions ..... 7

### I

Input circuits ..... 15

### N

NanoJ ..... 7

### O

Operating modes

    CANopen ..... 23

    serial ..... 21

Operating voltage ..... 17

Output circuits ..... 15

### P

Pin assignment

    connector X10 ..... 16

    Connector X11 ..... 14

    connector X12 ..... 17

Plug connections ..... 9

Protective circuits ..... 26

### R

RS485 network ..... 18

### T

Two-wire operation ..... 18

### V

Voltage supply ..... 17