



Short instructions Version 1.2.0
 Original: de
 Nanotec Electronic GmbH & Co. KG Phone: +49 (89) 900 686-0
 Kapellenstraße 6 Fax: +49 (89) 900 686-50
 85622 Feldkirchen, Germany info@nanotec.de

Introduction

The C5-E is a controller for the *open loop* or *closed loop* operation of stepper motors and the *closed loop* operation of BLDC motors.

This document describes the installation and commissioning of the controller. You can find the detailed documentation for the product on us.nanotec.com. The short instructions do not replace the *technical manual of the product*.

Copyright

© 2013 – 2019 Nanotec Electronic GmbH & Co. KG. All rights reserved.



Intended use

The C5-E serves to control stepper motors and BLDC motors and is used as a component in drive systems in a wide range of industrial applications.

Use the product as intended within the limits defined in the technical data (in particular, see **Permissible operating voltage**) and the approved **Environmental conditions**.

Under no circumstances may this Nanotec product be integrated as a safety component in a product or system. All products containing a component manufactured by Nanotec must, upon delivery to the end user, be provided with corresponding warning notices and instructions for safe use and safe operation. All warning notices provided by Nanotec must be passed on directly to the end user.

Warranty and disclaimer

Nanotec assumes no liability for damages and malfunctions resulting from installation errors, failure to observe this manual or improper repairs. The selection and use of Nanotec products is the responsibility of the plant engineer or end user. Nanotec accepts no responsibility for the integration of the product in the end system.

Our general terms and conditions apply: en.nanotec.com/service/general-terms-and-conditions/.

Customers of Nanotec Electronic US Inc. please refer to us.nanotec.com/service/general-terms-andconditions/.



Note

Changes or modifications to the product are not permitted.

Target group and qualification

The product and this documentation are directed towards technically trained specialists staff such as:

- Development engineers
- Plant engineers
- Installers/service personnel
- Application engineers

Only specialists may install, program and commission the product. Specialist staff are persons who

- have appropriate training and experience in work with motors and their control,
- are familiar with and understand the content of this technical manual,
- know the applicable regulations.

EU directives for product safety

The following EU directives were observed:

- RoHS directive (2011/65/EU, 2015/863/EU)
- EMC directive (2014/30/EU)

Other applicable regulations

In addition to this technical manual, the following regulations are to be observed:

- Accident-prevention regulations
- Local regulations on occupational safety

Safety and warning notices

Note



- Damage to the controller.
- Changing the wiring during operation may damage the controller.
- Only change the wiring in a de-energized state. After switching off, wait until the capacitors have discharged.

Note



Fault of the controller due to excitation voltage of the motor!
 Voltage peaks during operation may damage the controller.
 ► Install suitable circuits (e.g., charging capacitor) that reduce voltage peaks.

Note



Damage to the electronics through improper handling of ESD-sensitive components!
 The device contains components that are sensitive to electrostatic discharge. Improper handling can damage the device.
 ► Observe the basic principles of ESD protection when handling the device.

Note



- There is no polarity reversal protection.
- Polarity reversal results in a short-circuit between supply voltage and GND (earth) via the power diode.
- Install a line protection device (fuse) in the supply line.

Technical details and pin assignment

Environmental conditions


Environmental condition	Value
Protection class	IP20
Ambient temperature (operation)	-10 ... +40°C
Air humidity (non-condensing)	0 ... 95 %
Altitude of site above sea level (without drop in performance)	1500 m
Ambient temperature (storage)	-25 ... +85°C

Electrical properties and technical data

Property	Description / value
Operating voltage	12 V DC to 48 V DC +/-5%
Rated current	C5-E-1-81 (<i>low current</i>): 6 A _{rms} C5-E-2-81 (<i>high current</i>): 10 A _{rms}
Peak current	C5-E-1-81 (<i>low current</i>): 6 A _{rms} C5-E-2-81 (<i>high current</i>): 30 A _{rms} for 5 seconds
Commutation	Stepper motor – open loop, stepper motor – closed loop with encoder, BLDC motor – closed loop with Hall sensor, and BLDC motor – closed loop with encoder
Operating modes	<i>Profile Position Mode, Profile Velocity Mode, Profile Torque Mode, Velocity Mode, Homing Mode, Interpolated Position Mode, Cyclic Sync Position Mode, Cyclic Sync Velocity Mode, Cyclic Synchronous Torque Mode, Clock-Direction Mode</i>
Set value setting / programming	<i>Clock-direction, analog, NanoJ program</i>
Interfaces	USB, Modbus TCP

Property	Description / value
Inputs	<ul style="list-style-type: none"> • 5 inputs, 24 V (inputs 1 to 5) individually switchable between 5 and 24 V, factory setting: 5 V • 1 analog input, 10 bit, switchable 0-10 V or 0-20 mA, factory setting: 0-10 V • 1 analog input, 10 bit, 0-10 V
Outputs	3 outputs, (open drain, 0 switching, max. 24 V and 100 mA)
Protection circuit	Overvoltage and undervoltage protection Overtemperature protection (> 75° Celsius on the power board) Polarity reversal protection: In the event of a polarity reversal, a short-circuit will occur between supply voltage and GND over a power diode; a line protection device (fuse) is therefore necessary in the supply line. The values of the fuse are dependent on the application and must be dimensioned <ul style="list-style-type: none"> • greater than the maximum current consumption of the controller • less than the maximum current of the voltage supply. If the fuse value is very close to the maximum current consumption of the controller, a medium / slow tripping characteristics should be used.

Dimensioned drawings

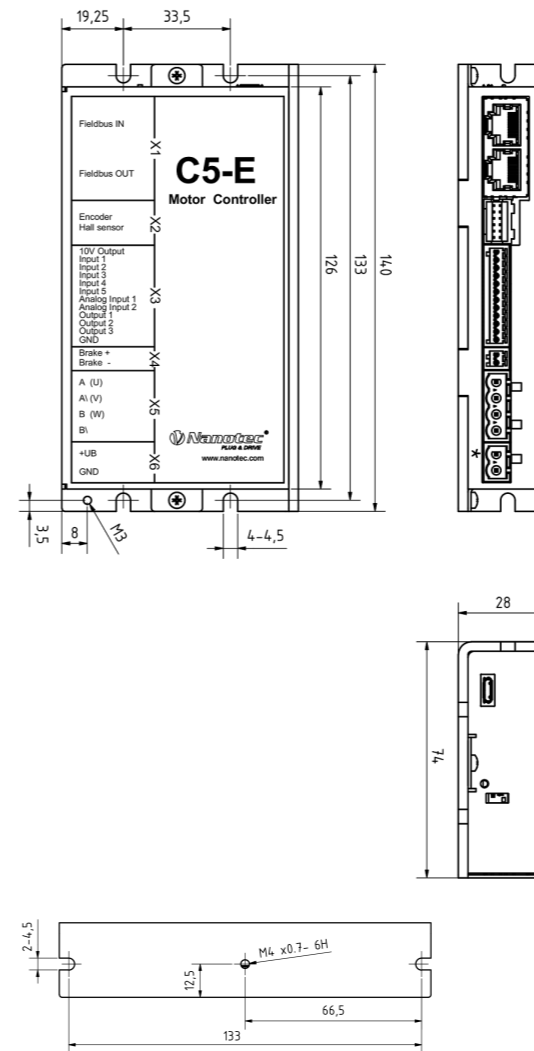

Overtemperature protection

Above a temperature of approx. 75°C on the power board (corresponds to 65–72°C outside on the back cover), the power part of the controller switches off and the error bit is set. After cooling down and confirming the error, the controller again functions normally.

LED signaling

Power LED

Normal operation

In normal operation, the green power LED L1 flashes briefly once per second.

Case of an error

If an error has occurred, the LED turns red and signals an error number.

The following table shows the meaning of the error numbers.

Flash rate	Error
1	General
2	Voltage
3	Temperature
4	Overcurrent
5	Controller
6	Watchdog-Reset

 


Note

For each error that occurs, a more precise error code is stored in object 1003_h.

Pin assignment

Pin 1 is marked with an asterisk "*".



Connector	Function	Pin assignment / description
X1	Modbus TCP	1. Tx+ 2. Tx- 3. Rx+ 4. n.c. 5. n.c. 6. Rx- 7. n.c. 8. n.c.
X2	Encoder and Hall sensor Max. 5V DC, 1 MHz Switching thresholds • On: >3.8 V • Off: <0.26 V	1. GND 2. Vcc: +5 VDC output, max. 200 mA 3. A 4. B 5. A\ 6. B\ 7. I 8. I\ 9. Hall 1 10. Hall 2 11. Hall 3 12. Shielding
X3	Digital and analog inputs and outputs Switching thresholds for digital inputs 1 - 5: 5 V (factory setting): On: >3.8 V; Off: <0.26 V 24 V: On: >14.42 V; Off: <4.16 V	1. 10V output: +10 V DC, max. 200 mA 2. Digital input 1: 5 V / 24 V, switchable with object 3240 _h , max. 1 MHz; <i>clock input</i> in clock-direction mode 3. Digital input 2: 5 V / 24 V, switchable with object 3240 _h , max. 1 MHz; <i>direction input</i> in clock-direction mode 4. Digital input 3: 5 V / 24 V signal, switchable with object 3240 _h 5. Digital input 4: 5 V / 24 V signal, switchable with object 3240 _h 6. Digital input 5: 5 V / 24 V signal, switchable with object 3240 _h 7. Analog input 1: 10 Bit, 0-10 V or 0-20 mA, switchable with object 3221 _h 8. Analog input 2: 10 Bit, 0-10 V, not switchable by means of software 9. Digital output 1: Open-Drain, max 24 V/100 mA 10. Digital output 2: Open drain, max 24 V/100 mA 11. Digital output 3: Open drain, max 24 V/100 mA 12. GND

Connector	Function	Pin assignment / description
X4	Brake	<ol style="list-style-type: none"> Brake+: internally connected to +UB Brake -: PWM-controlled open-drain output, max 1.5 A
X5	Motor	<ol style="list-style-type: none"> A (Stepper) U (BLDC) A\ (Stepper) V (BLDC) B (Stepper) W (BLDC) B\ (Stepper)
X6	Voltage supply 12-48 V DC±5%	<ol style="list-style-type: none"> +UB GND
X7	USB	Micro USB

Note

- EMC: For a DC power supply line longer than 30 m or when using the motor on a DC bus, additional interference-suppression and protection measures are necessary.
- An EMI filter is to be inserted in the DC supply line as close as possible to the controller/motor.
- Long data or supply lines are to be routed through ferrites.

Commissioning

The *Plug & Drive Studio* software offers you an option for performing the configuration and adapting the controller to the connected motor. You can find further information in document *Plug & Drive Studio: Quick Start Guide at us.nanotec.com*.

Observe the following note:

Note

- EMC: Current-carrying cables – particularly around supply and motor cables – produce electromagnetic alternating fields.
- These can interfere with the motor and other devices. Nanotec recommends the following measures:
- Use shielded cables and earth the cable shielding on both ends over a short distance.
- Use cables with cores in twisted pairs.
- Keep power supply and motor cables as short as possible.
- Earth motor housing with large contact area over a short distance.
- Lay supply, motor and control cables separately.

Configuration via USB

General

The following options are available for configuring the controller via USB:

Configuration file

This file can be saved to the controller via the USB connection. For further information, read chapters **USB connection** and **Configuration file**.

NanoJ program

This program can be programmed, compiled and then transferred to the controller with *NanoJ* via USB. *NanoJ* is integrated in the *Plug & Drive Studio* software. You can find further information in document *Plug & Drive Studio: Quick Start Guide at us.nanotec.com*.

After connecting to a voltage supply, the controller reads out the configuration in the following order:

- The configuration file is read out and processed.
- The NanoJ program is started.

USB connection

If the controller is connected to a PC via a USB cable, the controller behaves like a removable storage device. No further drivers are required.

Three files are displayed: the configuration file (*cfg.txt*), the *NanoJ program* (*vmmcode.usz*) and the information file (*info.bin*), where the serial numbers and firmware version of the product can be found.

You can thereby store the configuration file or the *NanoJ program* on the controller. The voltage supply of the controller must also be connected during USB operation.

Configuration file

General

The *cfg.txt* configuration file is used to preset values for the object dictionary to a certain value during startup. This file uses a special syntax to make accessing the objects of the object dictionary as easy as possible. The controller evaluates all assignments in the file from top to bottom.

Reading and writing the file

How to access the file:

- Connect and switch on the voltage supply.
- Connect the controller to your PC using the USB cable.
- After the PC has detected the device as a removable storage device, navigate in the Explorer to the directory of the controller. File *cfg.txt* (for a PD4C, the file is named *pd4ccfg.txt*) is stored there.
- Open this file with a simple text editor, such as Notepad or Vi. Do not use any programs that use markup (LibreOffice or similar).

After you have made changes to the file, proceed as follows to apply the changes:

- Save the file if you have not yet already done so. The motor stops.
- Disconnect the USB cable from the controller.
- Disconnect the voltage supply from the controller for approx. 1 second until the power LEDs stop flashing.
- Reconnect the voltage supply. When the controller is now restarted, the values in the configuration file are read out and applied.

Structure of the configuration file

Comments

Lines that begin with a semicolon are ignored by the controller.

Assignments

Values in the object dictionary can be set with the following syntax:

```
<Index>:<Subindex>=<Value>
```

Example

Set object 2031_h;00 (max. motor current) to the value "258_h" (600 mA):

```
2031:00=0x258
```

Set object 3202_h;00 to the value "8" (activate current reduction while at a standstill in *open loop* mode):

```
3202:00=8
```

or only set bit 3

```
3202:00.03=1
```

Configuring the Ethernet interface

Overview

IP address

The controller needs a valid IP address. This can be obtained in the following ways:

- DHCP: A DHCP server assigns the IP address to the controller (default setting).
- AutoIP: The controller automatically determines a suitable IP address. The prerequisite here is that the communication partners are in the same physical subnet and also use AutoIP.
- Static IP address: This is defined by the user.

Which method is used depends on the network environment and is defined by the network administrator.

The IP address can be determined most easily using the *ping* tool. To do this, the NetBIOS service must be activated on the PC and the MAC address of the controller must be known.

Setting the IP address

Each of the connected devices (controller and communication partners) in an Ethernet network or with a point-to-point Ethernet connection requires a unique IP address. This can either be obtained automatically (DHCP) or generated (Auto-IP) or assigned statically. In the following, "communication partner" refers to a PC or laptop.

You can integrate the controller in an existing Ethernet network. To do this, you only need to establish the physical connection with a standard Ethernet cable. Provided DHCP is activated on the controller (factory setting), the controller is also automatically detected on the network and can immediately be operated via a PC located on the network.

Setting DHCP/Auto-IP

IP addresses can be obtained dynamically in a network from a DHCP server or, for example, in the case of a PC direct connection, can be automatically self-generated without DHCP by the two communication devices (e.g., PC and controller). DHCP is preset in the controller at the factory for automatically obtaining an IP address from a DHCP server or for automatic IP address generation. To establish the connection to the controller, it may only be necessary to make a few settings on the communication partner (e.g., PC or laptop). Settings using the Windows 7 operating system as an example:

- Press the Windows Start button and select *Control Panel*.
- Select *Network and Sharing Center*.
- Select *Change adapter settings*.
- A list of the available network adapters is displayed. Open the properties on the adapter to which the controller is connected (e.g., click with the right mouse button).
- Select *Internet Protocol version 4 (TCP/IPv4)* and press the *Properties* button.
- Select the *Obtain an IP address automatically* option.
- Confirm acceptance of the entries with the *OK* button.

Configuring via Modbus TCP

This controller is equipped with a Modbus TCP interface. All messages are sent to port 502 of the controller via TCP; only one connection is supported. No CRC (as it is used with Modbus RTU) takes place.

The I/O data with any preconfigured drive values can be sent with the standard Modbus function codes. To configure your own I/O data, however, function code 2Bh (CAN Encapsulation) must be supported by the Modbus master in order for the parameters to be read and written independent of the process image.

If the master does not support this function code, the I/O image can be configured and stored using *Plug & Drive Studio*. The master can then access the data using the standard Modbus function codes.

Read chapter **Modbus TCP** in the *technical manual* of the controller for further details.

Establishing communication

- Connect the supply voltage to connector X6.
- Connect the *Modbus master* to connection X1 of the controller
- To test the interface, send bytes 00 00 00 00 00 0D 00 2B 0D 00 00 01 60 41 00 00 00 00 02 to the controller (you can find a detailed description of the Modbus function codes in chapter **Modbus TCP** of the *technical manual*). Statusword (6041_h) was read; you receive this response: 00 00 00 00 0F 00 2B 0D 00 00 01 60 41 00 00 00 00 XX XX 06.

Setting the motor data

Prior to commissioning, the motor controller requires a number of values from the motor data sheet.

- Number of pole pairs: Object 2030_h;00_h (pole pair count) The number of motor pole pairs is to be entered here. With a stepper motor, the number of pole pairs is calculated using the step angle, e.g., 1.8° = 50 pole pairs, 0.9° = 100 pole pairs (see step angle in motor data sheet). With BLDC motors, the number of pole pairs is specified directly in the motor data sheet.
- Object 2031_h;00_h: maximum permissible motor current (motor protection) in mA (see motor data sheet)
- Object 6075_h;00_h: rated current of the motor in mA (see motor data sheet), limited by 2031_h
- Object 6073_h;00_h: maximum current (for a stepper motor, generally corresponds to the rated current, bipolar) in tenths of a percent of the set rated current (see motor data sheet). Factory settings: "1000", which corresponds to 100% of the value in 6075_h. Is limited by 2031_h.
- Object 203B_h;02_h Maximum duration of the maximum current (6073_h) in ms (for initial commissioning, Nanotec recommends a value of 100 ms; this value is to be adapted later to the specific application).
- Setting the motor type:

- Stepper motor:
 - Object 3202_h;00_h (Motor Drive Submode Select): Defines motor type stepper motor, activates current reduction on motor standstill: 0000008h.
 - Object 2037_h (open loop current reduction value/factor): the root mean square is specified to which the rated current is to be reduced if current reduction is activated in *open loop*.
- BLDC motor:
 - Object 3202_h;00_h (Motor Drive Submode Select): Defines motor type BLDC: 00000040h

- Motor with encoder: Object 2059_h;00_h (Encoder Configuration): Depending on the encoder version, one of the following values is to be entered (see motor data sheet):

- Supply voltage 5V, differential: 00000000h
- Supply voltage 5V, single-ended: 00000002h

- Motor with encoder without index: You must set the encoder parameters after the **Auto setup**, see chapter **Configuring the sensors**.

- Motor with brake: Object 3202_h;00_h (Motor Drive Submode Select): The brake control is activated for the initial commissioning. Depending on the

specific application, this configuration can be deactivated later if necessary. One of the following values is to be entered depending on the motor type:

- Stepper motor, brake control (and **current reduction**) activated: 0000000Ch
- BLDC motor, brake control activated: 00000044h

Note

Due to the sine commutation and the sinusoidal current flow, the current of a motor winding can achieve an alternating current value that is briefly greater (by max. √2 times) than the set current.

At especially slow speeds or while at a standstill with full load, one of the windings can therefore be supplied with overcurrent for a longer period of time. Take this into account when dimensioning the motor and select a motor with larger torque reserve if necessary if required by the application.

Auto setup

To determine a number of parameters related to the motor and the connected sensors (encoders/Hall sensors), you must perform an auto setup.

Tip

As long as the motor connected to the controller or the sensors for feedback (encoders/Hall sensors) are not changed, auto setup is only to be performed once during initial commissioning.

Note

Note the following prerequisites for performing the auto setup:


- The motor must be load-free.
- The motor must not be touched.
- The motor must be able to turn freely in any direction.
- No NanoJ programs may be running (object 2300_h;00_h bit 0 = "0", see **2300h NanoJ Control**).

Execution

- To preselect the *auto setup* operating mode, enter the value "-2" (= "FE_h") in object 6060_h;00_h. The *power state machine* must now switch to the *Operation enabled* state.
- Start *auto setup* by setting bit 4 *OMS* in object 6040_h;00_h (controlword).

To determine the values, the direction of the measurement method is reversed and edge detection re-evaluated.

Value 1 in bit 12 *OMS* in object 6041_h;00_h (statusword) indicates that the auto setup was completely executed and ended. In addition, bit 10 *TARG* in object 6041_h;00_h can be used to query whether (= "1") or not (= "0") an encoder index was found.

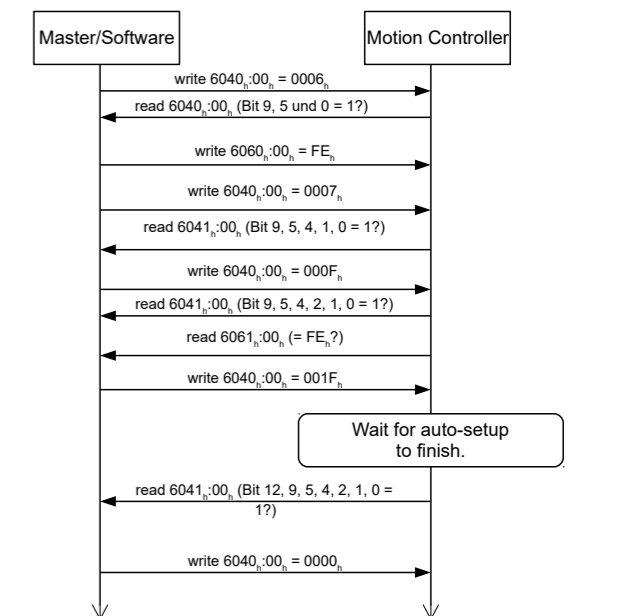

CAUTION

Uncontrolled motor movements!

After the auto setup, the internal coordinate system is no longer valid. Unforeseen reactions can result.

- Restart the device after an auto setup. Homing alone does not suffice.